



## Zoom connection guide Tandberg TRC5 remote control

### General information

Zoom meetings involving one or more centrally bookable videoconference enabled rooms are usually scheduled by VAVS to connect automatically, provided [videoconferencing@jcu.edu.au](mailto:videoconferencing@jcu.edu.au) is invited by the organizer.


### Join a Zoom meeting manually




1. Tap the Address Book key on the Tandberg remote
2. Locate the Zoom Meeting Bridge (SIP) entry and tap the Call key
3. Enter the Zoom Meeting ID followed by the #-key
4. Enter the Zoom Passcode followed by the #-key

# Tandberg TRC-5 remote control user guide


**Microphone** turns your microphone on and off.



**Volume + and -** adjusts the system volume.




**OK/Select:** Press the key to confirm your choice or selection. Use Arrow keys to navigate. When the menu is closed, use Arrow keys to move the camera.




**Home:** Press the Home key to show the menu on screen.



 
**Phone book:** Press the Phone Book key to display the local directory.




Press **Call** to place a call.



**Clear:** Press the Clear key to remove characters in a text field.




**Switch to PC\*** (default). Press once more to switch back to Main Camera. Open Presentation menu, to select other sources.




Press and hold


Use **Zoom + and -** to zoom the camera in and out.



 
**Function keys:** Enable shortcuts and advanced functions. Each key corresponds to a soft key on screen.




Press the **Layout** key to display the Layout menu, then select a view in the menu.



Press the **End call/Standby** key to end a call, or when idle, press and hold the key to go into standby mode.



**Alphanumeric keypad:** Use the keypad to enter letters or numbers, similar to a cellular phone keypad

1 .@	2 abc	def 3
4 ghi	5 jkl	mno 6
7 pqrs	8 tuv	wxyz 9
* 0 ...	abc/123 #	

- 0-9, a-z, period (.), @, space,\*:** Press a key repeatedly to toggle between the options displayed on each key.
- abc/123 #:** Press the # key to toggle between touch tones mode (long press), lower case characters and numbers.

Press and hold

Use the **pound** key to enter touch tone (DTMF) mode (in a call). Press **OK** when done.

**abc/123:** When entering text, change between capital and lower case letters.

**Hold** to change between Character/Numeric mode.

Press and hold

**Waking up the system**  
Grab the remote control and make sure your hand touches the rubber line sensors going along both sides of the remote control.  
or: Touch **any key** on the remote control.